Philips GoGear audio video player

SA5225 SA5245
SA5247 SA5285
SA5287

# Quick start guide

1 Install

2 Connect and Charge

3 Transfer

4 Enjoy

PHILIPS

# Need help?

Please visit
www.philips.com/welcome
where you can access to a full set of supporting materials such as user manual, the latest software upgrades and answers to frequently asked questions.

# Need help?

Look up our Support Centre website

www.philips.com/welcome

# Besoin d'aide ?

Visitez la page Web de notre centre d'assistance à l'adresse

www.philips.com/welcome

# ¿Necesita ayuda?

Consulte nuestra página Web de Soporte técnico,

www.philips.com/welcome

# Support?

Besuchen Sie unser Support Center auf

www.philips.com/welcome

# Contents

EN


2 Is there a manual?
2 Register your product
2 Don't forget about upgrades
3 What's in the box
4 Overview of controls and connections
5 Install
5 Connect and charge
5 Connect to PC
6 Read the battery level indication of your player
6 Transfer
6 Transfer music with Rhapsody Media Player
12 Download, convert and transfer videos with the Stream Ripper of the MediaConverter™
14 Enjoy
14 Turn on and play
14 Main menu
14 Navigate the menu
15 Music mode
16 Video
16 Video play
16 Fast forward / backward control
17 Radio
17 Auto tune
17 Play a preset radio station
18 Recordings
18 Make recordings
18 Play recordings
19 Troubleshooting
19 How do I reset my player?
20 Need help?
20 Disposal of your old product

# Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your player. You can also download the same file from this website: www.philips.com/support

# Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

# Don’t forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free updates of the latest software and Firmware Manager for your product. These downloads will help you to optimize your product’s performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

# What's in the box

Headphones

USB cable

CD-ROM

Quick start guide

What else you'll need:

Computer

A computer with:
Windows XP (SP2 or above) or Vista
Pentium III 800MHz processor or higher
CD-ROM drive
128 MB RAM
500MB Hard Disk space
USB Port
Internet connection (preferable)
Microsoft Internet Explorer 6.0 or later

# Overview of controls and connections

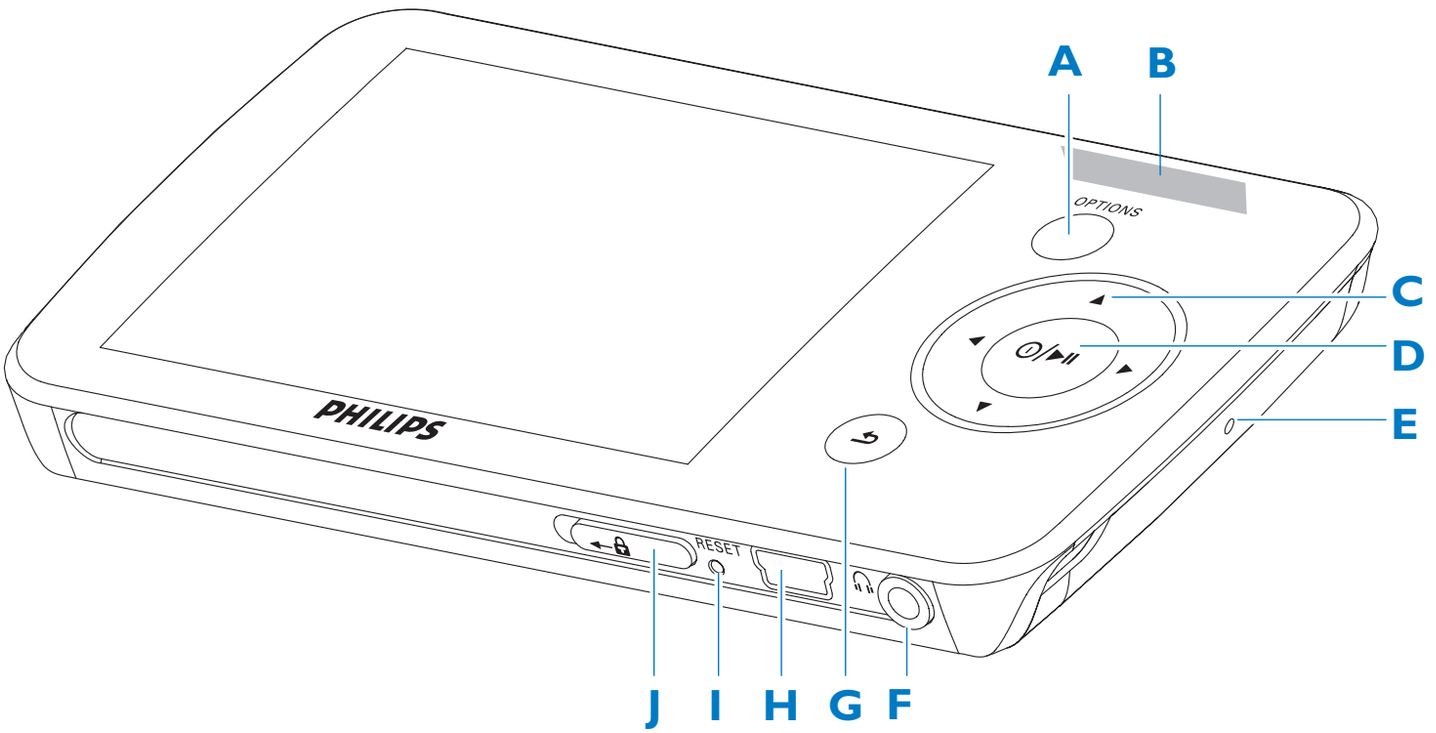


| | | |
|---|---|---|
| **A** | OPTIONS | Offers a selection of options, depending on the current menu |
| **B** | -VOLUME+ | Increases/decreases volume (hold to increase/decreases fast) |
| **C** | ◀ | Skips back (hold to quick skip) |
| | ▶ | Skips forward (hold to quick skip) |
| | ▲/▼ | Scrolls up/down (hold to quick scroll) |
| **D** | ⏻ / ▶II | On / Off<br>Play/Record / Pause<br>Confirm selection |
| **E** | MIC | Microphone |
| **F** | 🎧 | Headphones jack |
| **G** | ⮌ | Back one level (hold to return to root menu) |
| **H** | ⇄ | USB connector |
| **I** | RESET | |
| **J** | 🔒 slider | Hold slider to lock/unlock all keys (except -VOLUME+) |

# 1 Install

1 Insert the CD supplied with your product into the CD ROM drive of your PC.
2 Follow the on-screen instructions to complete the installation of **Rhapsody Media Player**, **Philips Device Manager** and **MediaConverter™ for Philips**. The MediaConverter™ for Philipsconverts video clips into suitable formats for the player.

# 2 Connect and charge

## A Connect to PC

When you connect the player to the PC, it automatically charges.

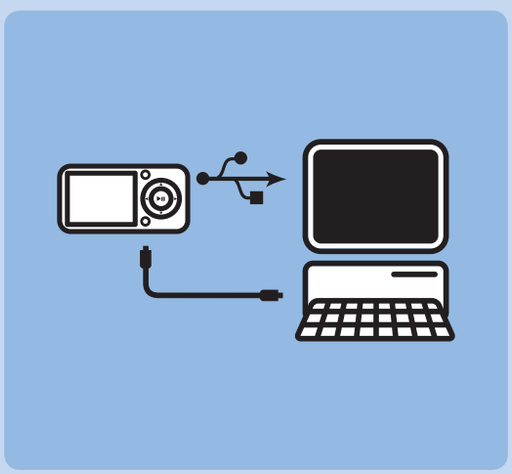

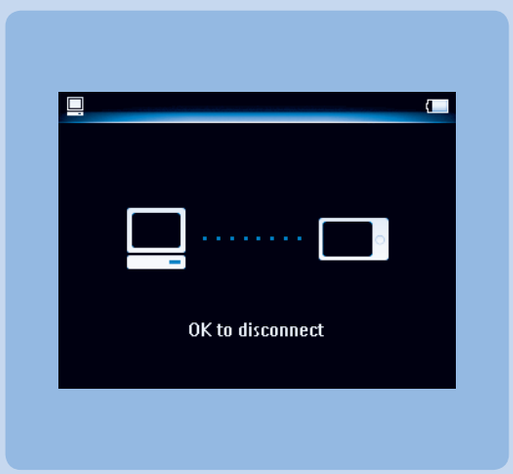


1 Before you use the player for the first time, charge it for at least 5 hours.
> *The battery has a 100% charge after 4 hours and an 80% charge after 2 hours.*
2 Connect the supplied USB cable to the mini USB port at the bottom of the player, the other end to your PC.
> *The player will start to charge as soon as it is connected to your PC.*

### B Read the battery level indication of your player

The approximate power levels of your battery are indicated as follows:

Full | Two-thirds full | Half full | Low | Empty

**Note** When the batteries are almost empty, the battery screen blinks. The player saves all settings and unfinished recordings and switches off in less than 60 seconds.

# 3 Transfer

You can transfer music and picture files to your player using **Rhapsody Media Player**.
See **Organize and transfer pictures and music with Rhapsody Media Player** section of the user manual for more details.

### A Transfer music with Rhapsody Media Player

#### Install Rhapsody Media Player

Install the Rhapsody Media Player from the supplied software CD.

## Add your music to the player

You can add the music that is stored on your PC. For more information visit www.Rhapsody.com.

1 Ensure the computer is connected to the Internet.
2 Connect the player to the computer.
3 Launch the **Rhapsody Media Player**.
4 In the sources window on the left hand side of the screen, select **My Library**.
5 On the toolbar at the top, select the pull-down menu **File** and select **Add Media to My Library...**.

**5** In the pop-up window, check the box next to **Scan for music in this folder:**.

> *By default, the pop-up window shows the music in the My Music folder on your computer.*

Click **Browse...** to find the folder with your music, if it is different from the pre-selected folder.

**7** Click **Import**.

> *All music in the selected folder is imported into My Library.*

**8** To transfer the music files to your player, drag and drop the files from the main window to the player icon in the **Sources** window.

## Add Rhapsody Music* to the player

Depending on the type of Rhapsody account you hold, you can add Rhapsody Music to the player using. For more information visit www.Rhapsody.com.

1 Ensure the computer is connected to the Internet.
2 Connect the player to the computer.
3 Launch the **Rhapsody Media Player**.

4 In the main window, select the tab **Music Guide**.
5 In the main window, select an album and song title.
6 In the main window, click the **+** icon to add the title to **My Library**.
7 In the **Sources** window, select **My Library**.
8 From the main window, drag and drop your music to the player in the **Sources** window.

* *This feature is available only for music that you purchased through Rhapsody.*

## Add Rhapsody Music Channels* to the player

Depending on the type of Rhapsody account you hold, you can add Rhapsody Music Channels to the player using. For more information visit www.Rhapsody.com

**1** Ensure the computer is connected to the Internet.

**2** Connect the player to the computer.

**3** Launch the **Rhapsody Media Player**.

> *The player is shown in the Sources window on the left hand side of the screen.*

**4** In the main window, select the tab **Channel Guide**.

**5** In the main window, click on the **+** icon to add a channel to **My Channels**.

**6** In the **Sources** window, select **My Channels**.

> *The main window shows a list of your channels.*

**7** Drag and drop your channels to the player in the **Sources** window.

* *This feature is available only if you subscribe to Rhapsody Music Channels.*

## Transfer picture files to the player with Rhapsody Media Player

You can transfer picture files to your player using Rhapsody Media Player.

1 Connect the player to the computer.

2 Launch the **Rhapsody Media Player**.

> *The player is shown in the Sources window on the left hand side of the screen.*

3 In the **Sources** window, select **My Library**.

4 In the main window, click on a tab to select **Photos**.

5 To add pictures from a different folder on your computer, click on the **Add Photos** icon.

6 In the **Add Media to My Library** pop-up window, check the box next to **Scan for photos in this folder:**.

> *By default, the pop-up window shows the pictures in the My Pictures folder on your computer.*

Click **Browse...** to find the folder with your pictures, if it is different from the pre-selected folder.

7 Click **Import**, to import the selected folder to My Library.

8 To transfer the picture files to your player, drag and drop the files from the main window to the player icon in the **Sources** window.

## B Download, convert and transfer videos with the Stream Ripper of the MediaConverter™

**Important**

DRM protected videos that you have downloaded (purchased) from the Internet must have a bit rate of ⩽ 800kbps so you can transfer them to the player. You can obtain the licence for DRM protected videos when you play the videos on your PC that is connected to the Internet. You can move DRM protected videos with downloaded licence to the VIDEO folder of your player by 'drag & drop' in Window Explorer.

**Important**

To use the Stream Ripper feature and avoid download error messages, install the 'FLV codec' on your PC. (Tip: If you enter 'download FLV codec' in your Internet search engine, you can find websites that offer a download of the FLV codec.)

1 Use the **Internet Explorer** to open the website from where you want to download the video.
The Stream Ripper software supports downloads from the following websites:
- video.google.com
- myspace.com
- youtube.com

2 While playing the video on the website, move your mouse cursor over the video until you see the Stream Ripper icon

in the top left hand side corner, then click **Download**.
> *When the video is downloaded the MediaConverter™ opens and shows the downloaded video.*

**3** In the **MediaConverter™ window**, click **Start** to start the conversion and transfer of the video.

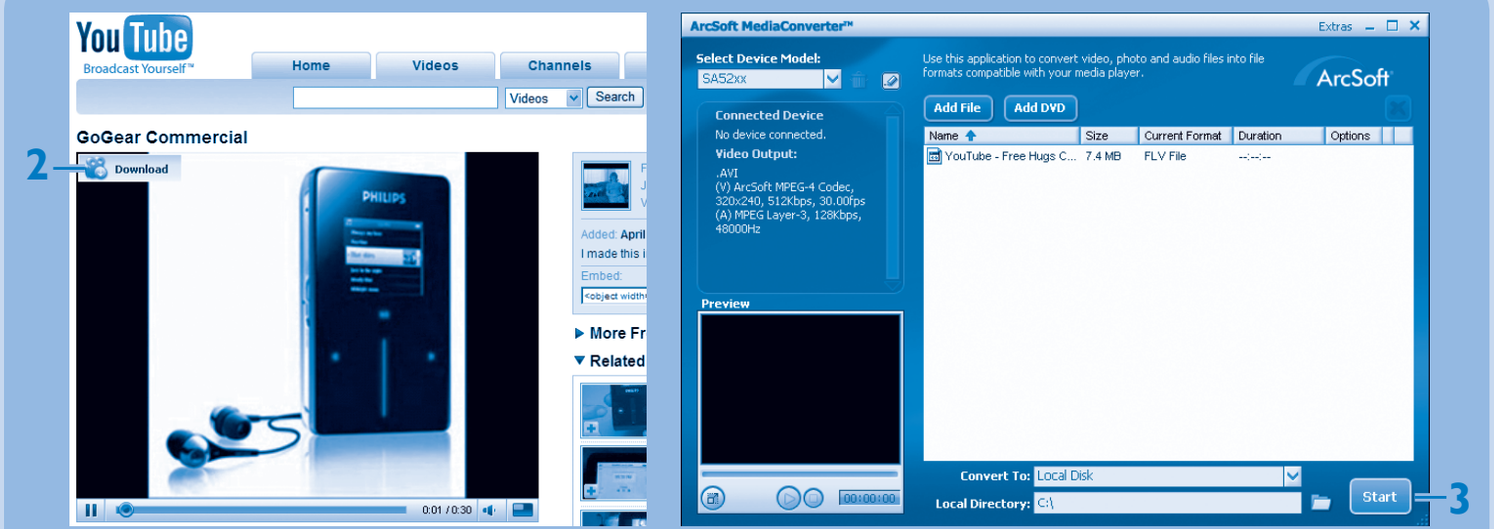


> *The progress of conversion and transfer is shown.*
> *All the converted files will be transferred to the player.*

**Tip** You can also select the files in **Windows Explorer** and then drag and drop them into the **MediaConverter™ for Philips** screen.

**Note** If needed, the files will first be converted to a format that can be played on the player.

# 4 Enjoy

## A Turn on and play

To turn on, press ⏻/▶II until the display shows the Philips logo.
To turn off, press and hold ⏻/▶II until the display shows 'Bye'.

## B Main menu

| | |
|---|---|
| Music | Play digital music tracks |
| Rhapsody Channels* | Listen to Rhapsody Music Channels |
| Video | Watch videos |
| Pictures | View pictures |
| Radio | Listen to FM radio |
| Recording | Create or listen to recordings |
| Folders | View folders |
| Settings | Customize the settings of your player |
| Now playing | Go to the play screen |
| Last played | Resume play |

* *Rhapsody Music Channels are 'virtual' radio stations and are only available after active Rhapsody Music Channel conntent is transferred to the player.*

## C Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations.

| Goal | Action |
|---|---|
| Return to previous menu | Press ⮌ |
| Return to main menu | Press and hold ⮌ |
| Browse through menus | Press ▶II or ⮌ |
| Scroll through a list | Press ▲ or ▼ |
| Select an option | Press OPTION |

# Music mode (also play mode for recordings)

The player offers the following music mode options:

| Goal | Action |
|---|---|
| Play / Pause music | Press ▶II |
| Skip to next audio file | Press ▶ |
| Return to previous audio file | Press ◀ |
| Fast rewind | Press and hold ▶ |
| Fast forward | Press and hold ◀ |
| Return to browsing menu | Press ⮌ key |
| Increase volume | Press Vol + |
| Decrease volume | Press Vol - |
| Access options menu | Press OPTIONS |

# Video

## Video play

You can play video clips that are stored on the player.

1 From the main menu, select to enter Video mode.
> *A list of video files stored on the player is displayed.*

2 Press ▲ or ▼ to select the file and press ▶II to play.

3 Short press ⮌ to go back to the previous menu, and long press ⮌ to return to the main menu.

## Fast forward / backward control

The player enables you to scan videos in fast forward / backward mode.

**Fast forward / backward**

1 Long press ▶ to select 4x normal speed.
> *Press ▶II anytime to resume normal speed play.*

2 While in 4x normal speed mode, press ▶ to cycle through the following speed options: 8x normal speed > 16x normal speed > 4x normal speed…

# Radio

From the main menu, select to enter radio mode.

**Connect the headphones**

The supplied headphones serve as a radio antenna. Ensure you connect the headphones properly for an optimal reception.

## Auto tune

1 From the Radio menu, select **Auto tune**.
   > *The radio automatically tunes radio stations and saves the frequencies to presets.*
   *The radio can store up to 20 radio station to presets.*

## Play a preset radio station

1 From the Radio menu, select **Presets**.
2 Press ▲/▼ to select preset, ▶II to start playing.
3 Press ◀/▶ to change to another preset.
4 To fine tune frequency, quick press ▲/▼.
5 To search for the next stronger signal, long press ▲/▼.
   To exit radio, long press ⮌.

# Recordings

You can record audio with the player.

## Make recordings

1 From the main menu, select .

2 Press ▲ or ▼ to select the **Start voice recording**, then ▶II to start.

> *The player records and shows the recording display.*

3 Press ▶II to pause.

4 Press ⮌ to stop and save the recording.

> *Your recordings are saved in the Recordings library on the player.*

5 You can find the voice recordings file under > **Recordings Library** > **Voice recordings**.

**Tip** You can pause and restart a recording anytime with ▶II.

## Play recordings

1 From the main menu, select > **Recordings Library** > **Voice recordings**.

2 Press ▲ or ▼ to select the recording you want to hear.

3 Press ▶II to play.

# Troubleshooting



## How do I reset my player?

Insert a small pin or other sharp object into the reset hole located at the bottom of the player. Hold until the player shuts down.

## If none of the above works, then you may have to use the Device Manager to recover your player:

1 Launch the **Philips Device Manager** at **Start** > **Programs** > **Philips Digital Audio Player** > **SA52XX** > **Philips SA52XX Device Manager** on your PC.
2 Press and hold the **VOL+** button while your player is connecting to the PC.
3 Keep holding the key until the **Philips Device Manager** acknowledges your player and goes into recovery mode.
4 Click the **Repair** button and follow the instructions given by the **Device Manager**.
5 After the player has been repaired, disconnect it from your PC and re-start.

# Need help?

## User Manual

See the user manual on the CD-ROM that is supplied with this player.

## Online

Go to www.philips.com/welcome

# Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

The built-in rechargeable battery contains substances that may pollute the environment. Always hand the appliance in at an official collection point to remove the battery before discarding the appliance. Battery should be disposed of at an official collection point.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners
© 2008 Koninklijke Philips Electronics N.V.
All rights reserved.

www.philips.com

Printed in China

wk8291